
REVISIONS				
ECN	REV	DESCRIPTION	DATE	BY/APPVL
10207	00	NEW	09-07-10	DJB/JDN

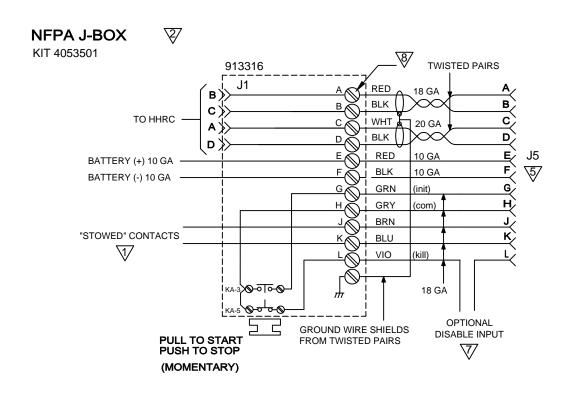

NOTES

- USE SW1 POSITION 6 ON BASE BOARD TO SELECT OPEN OR CLOSED WHEN NESTED. (SOFTWARE 6.3 AND HIGHER)
 SW1-6 OPEN = CONTACTS CLOSED WHEN NESTED
 - SW1-6 OPEN = CONTACTS CLOSED WHEN NESTED SW1-6 CLOSED = CONTACTS OPEN WHEN NESTED.
 - 2 AMPS MAX CURRENT, 20 GA. MINIMUM CONDUCTOR.
- 2. SW1 POSITION 5 ON BASE BOARD MUST BE OPEN (NFPA MODE)
- 3. SW1 POSITION 5 ON BASE BOARD MUST BE CLOSED (STANDARD MODE)
- 4. REMOVE JUMPER IF REPLACED BY PARKING BRAKE INTERLOCK. CLOSED WHEN BRAKE "ON".
- 5. 4032502 (30 FT. CABLE), 4032503 (50 FT. CABLE). TO J5 ON POWERLITE BASE BOARD.
- 6. 4032101 (20 FT. CABLE), 4032102 (50 FT. CABLE)
- 7. OPTIONAL DISABLE INPUT, CUSTOMER SUPPLIED CONTACTS. MUST HAVE CONTINUITY TO FUNCTION. WILL NOT ALLOW OPERATION IF OPEN, ACTS AS EMERGENCY STOP.
- 8. 4.4in-lbs, 0.5Nm
- 9. 20 in-lbs, 2.3Nm

